

Connect a Motorola GM-Series or CM-series to Mimer X-Link

Interface Power Supply

+12VDC / max 0,3A.

See wiring diagram on the following page.


Radio programming

- Pin#3 shall be set to Ext. Mic PTT, active low.
- Pin#14 shall be set to PL/Talkgroup Detect, active low

Settings in the X-Link interface

Select the proper settings for Radio A or Radio B depending on your connection.

- Radio with squelch output for Rx detect

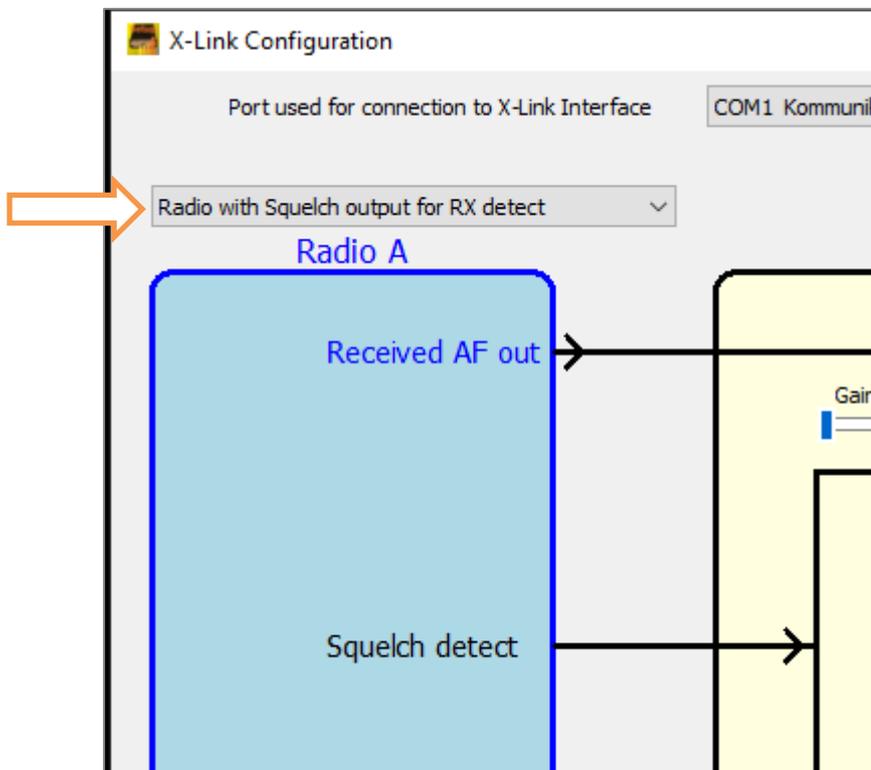

Part of the Configuration software window

Check/adjust the audio levels in both directions in the interface so that the users hears the X-Link with the same level as when listening to other radios.

See the X-Link setup manual for details on setting the audio level.

Connection Cable:

Select the proper configuration below depending on if your radio will be connected as Radio A or Radio B to the X-Link interface.

