

## Connect Estalky GT61 to Mimer X-Link

**Interface Power Supply**  
+12VDC / max 0,3A.

### Connection

See wiring diagram on following pages.

### Programming of the PoC unit

No special programming is needed in the unit.

The unit is connected through both the microphone connector on the front and the 9-PIN connector on the back.

### Volume setting

The volume of the PoC unit shall be set to ~60% volume. (The dot straight over where the keys meet)




*Radio connected through X-Link to Estalky*

### Settings in the X-Link interface

Select the proper settings for Radio A or Radio B depending on your connection.

- Radio with AF level sense for Rx detect.
- Set the detect level etc.  
Details can be found in the setup manual.

The levels in the picture are our recommendations. You might find that your radio needs adjustments.

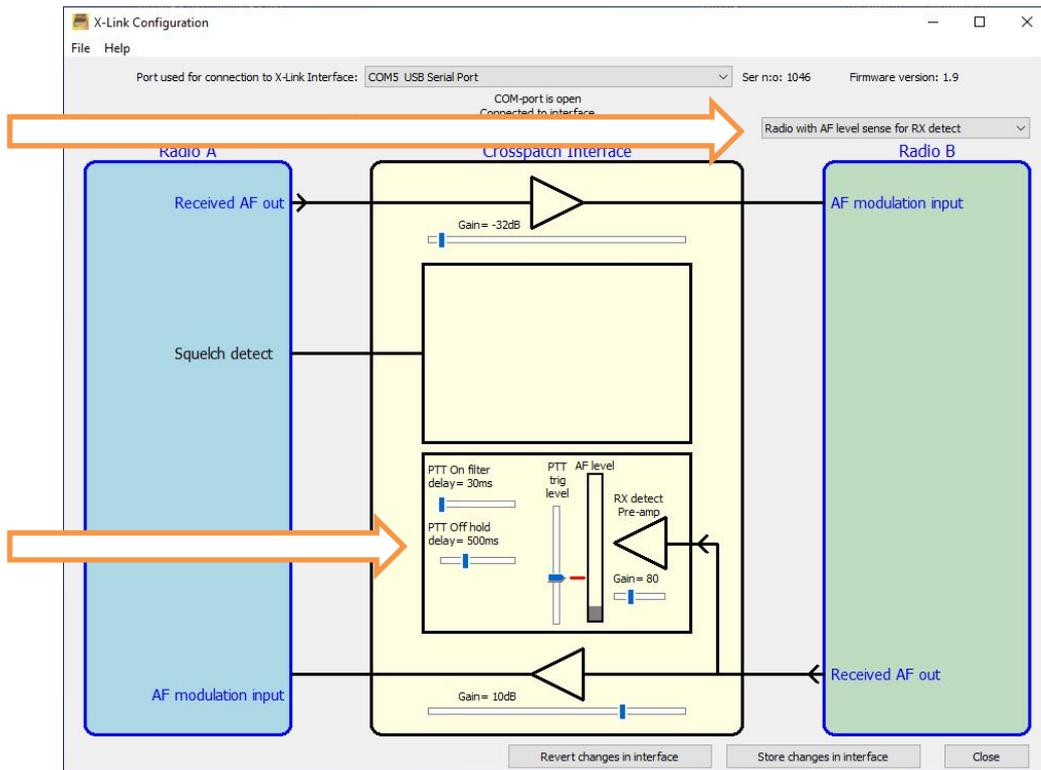

*Part of the Configuration software window*

Check/adjust the audio levels in both directions in the interface so that the users hear the X-Link with the same level as when listening to other radios.

See the X-Link setup manual for details on setting the audio level.

**Connection Cable:**

Select the proper configuration below depending on if your radio will be connected as Radio A or Radio B to the X-Link interface.

