

Connect Icom portable to Mimer X-Link

IP501H, IP100H and other Icom radios with the 2-pin accessory side connector

Interface Power Supply

+12VDC / max 0,3A.

See wiring diagram on following pages.

Programming the radio

No special programming is needed in the radio.

Connecting the radio

The radio is connected through the 2-pin side connector.

Volume setting

The volume of the portable shall be set to "half" volume.




Cable kit X-Link to Icom portable

Settings in the X-Link interface

Select the proper settings for Radio A or Radio B depending on your connection.

- Radio with AF level sense for Rx detect.
- Set the detect level etc.
Details can be found in the set up manual.

The levels in the picture are our recommendations. You might find that your radio needs adjustments.

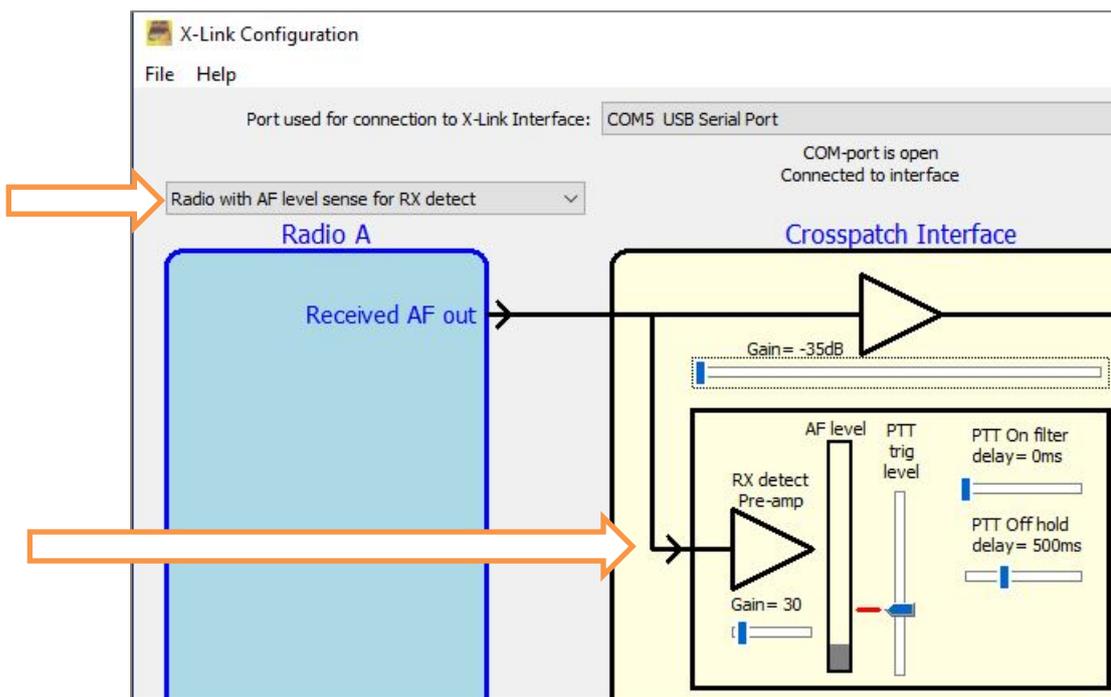

Part of the Configuration software window

Check/adjust the audio levels in both directions in the interface so that the users hears the X-Link with the same level as when listening to other radios.

See the X-Link setup manual for details on setting the audio level.

Connection Cable:

Select the proper configuration below depending on if your radio will be connected as Radio A or Radio B to the X-Link interface.

