

Connect Motorola Wave to Mimer X-Link

Wave TLK150

Interface Power Supply

+12VDC / max 0,3A.

See wiring diagram on following pages.

Programming the radio

- All alert tones shall be turned off
- External speaker shall be selected
- Power on configuration shall be set for Ignition sense

See photos further down.

Settings are done both from the radios front panel and in the web portal.

Connecting the radio

The radio is connected through the back connector.

Volume setting


The volume of the radio shall be set to “half” volume.

Settings in the X-Link interface

Select the proper settings for Radio A or Radio B depending on your connection.

- Radio with AF level sense for Rx detect.
- Set the detect level etc.
Details can be found in the setup manual.

The levels in the picture are our recommendations. You might find that your radio needs adjustments.

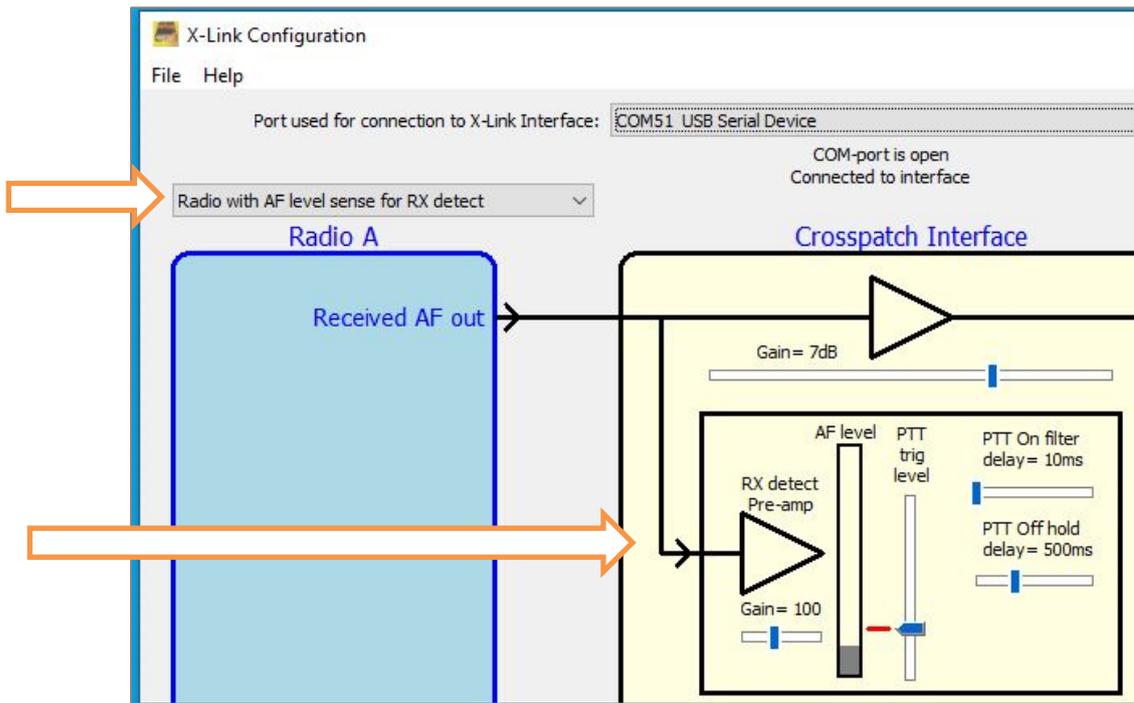

Part of the Configuration software window

Check/adjust the audio levels in both directions in the interface so that the users hear the X-Link with the same level as when listening to other radios.


See the X-Link setup manual for details on setting the audio level.

Settings in the TLK150

From the front panel



From the setup web page

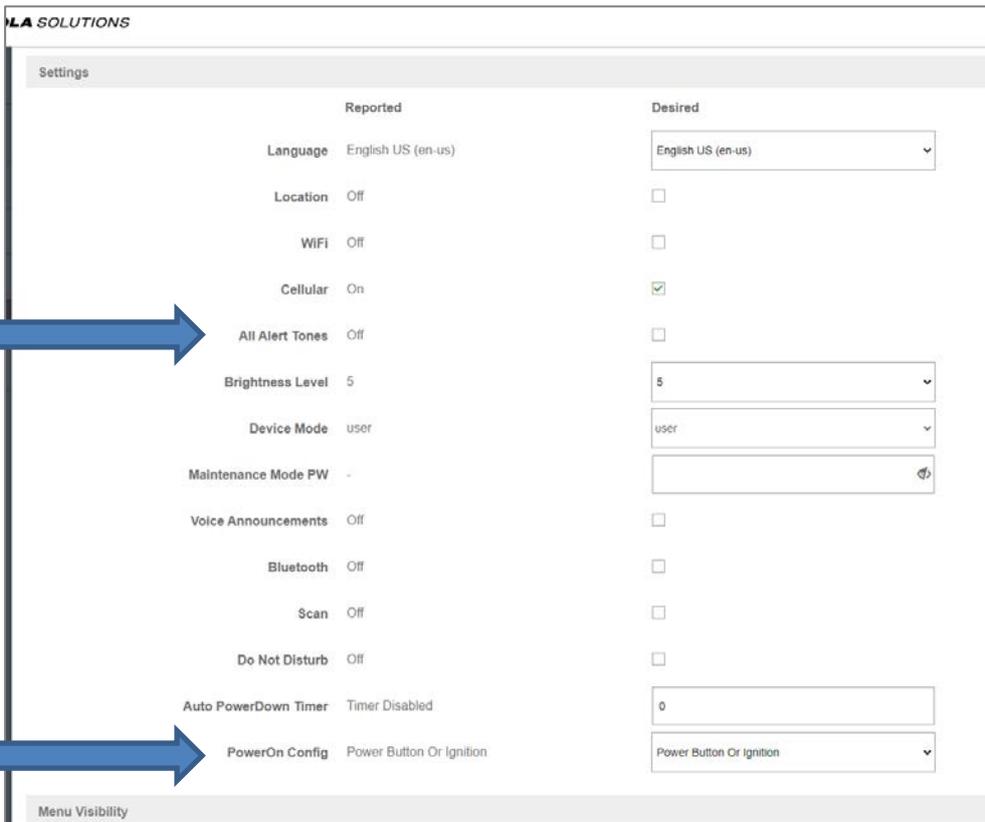

Connection Cable:

Select the proper configuration below depending on if your radio will be connected as Radio A or Radio B to the X-Link interface.

