

## X-Link Cable kit 3356

**Connect a Sailor 6222/6248 to Mimer X-Link MK2**

Also refer to the X-Link setup manual.

### **Interface Power Supply**

12VDC / max 0,3A.

Power connection through separate cable delivered with the interface. Red is positive.

### **Programming the radio**

No special programming is needed in the radio.

### **Connecting the radio**

The radio is connected through the back connector.

### **Volume setting**


The volume control on the front panel does not change the audio to the interface, so it can be turned all the way down.

## Settings in the X-Link interface

Select the proper settings for Radio A or Radio B depending on your connection.

- Radio with AF level sense for Rx detect.
- Set the detect level etc.  
Details can be found in the setup manual.

The levels in the picture are our recommendations. You might find that your radio needs adjustments.

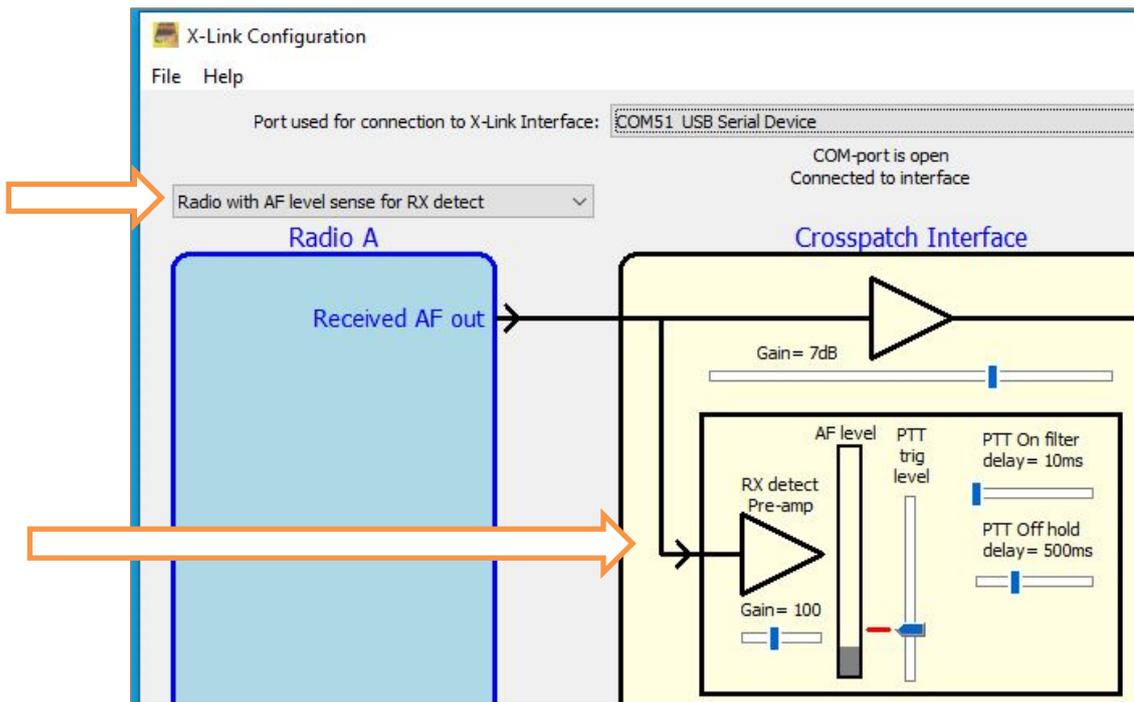


*Part of the Configuration software window*

Check/adjust the audio levels in both directions in the interface so that the users can hear the X-Link with the same level as when listening to other radios.

See the X-Link setup manual for details on setting the audio level.

## Connectors at the rear

- Connect the interface cable in connector 1

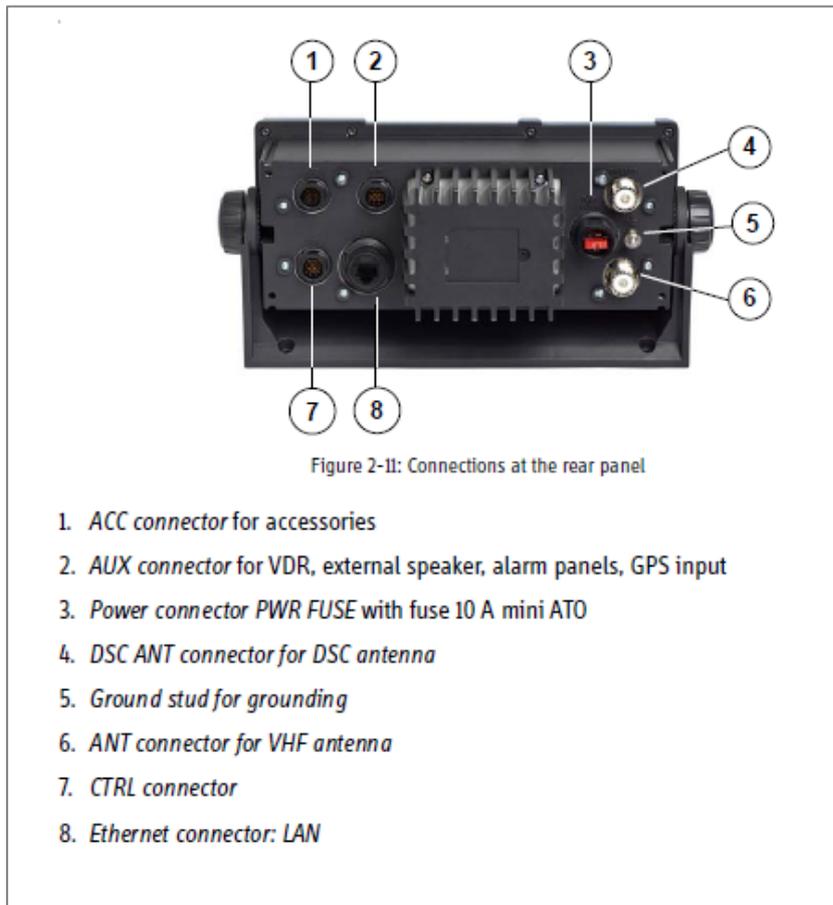

*Picture from Sailor Installation Manual*