

Connect Ericsson Aurora / Niros TRX3001 to Mimer X-Link

Interface Power Supply

+12VDC / max 0,3A.

See wiring diagram on following pages.

Programming the radio

No special programming is needed in the radio.

Connecting the radio

The radio is connected through either the microphone connector on the control head, or through the back connector "Microphone 2".

Volume setting

The volume of the radio shall be set to 9 steps above zero.




Cable kit X-Link to Aurora mobile, connected in the back

Settings in the X-Link interface

Select the proper settings for Radio A or Radio B depending on your connection.

- Radio with AF level sense for Rx detect.
- Set the detect level etc.
Details can be found in the set up manual.

The levels in the picture are our recommendations. You might find that your radio needs adjustments.

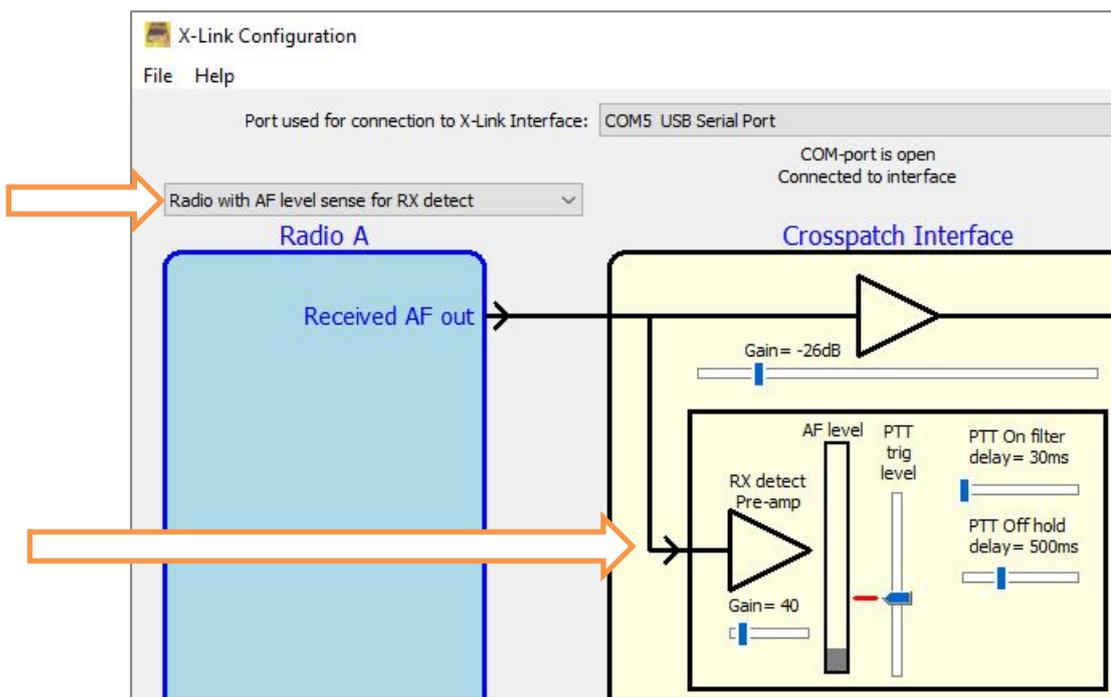

Part of the Configuration software window

Check/adjust the audio levels in both directions in the interface so that the users hears the X-Link with the same level as when listening to other radios.

See the X-Link setup manual for details on setting the audio level.

Connection Cable:

Select the proper configuration below depending on if your radio will be connected as Radio A or Radio B to the X-Link interface.

